




685-700x1400mm

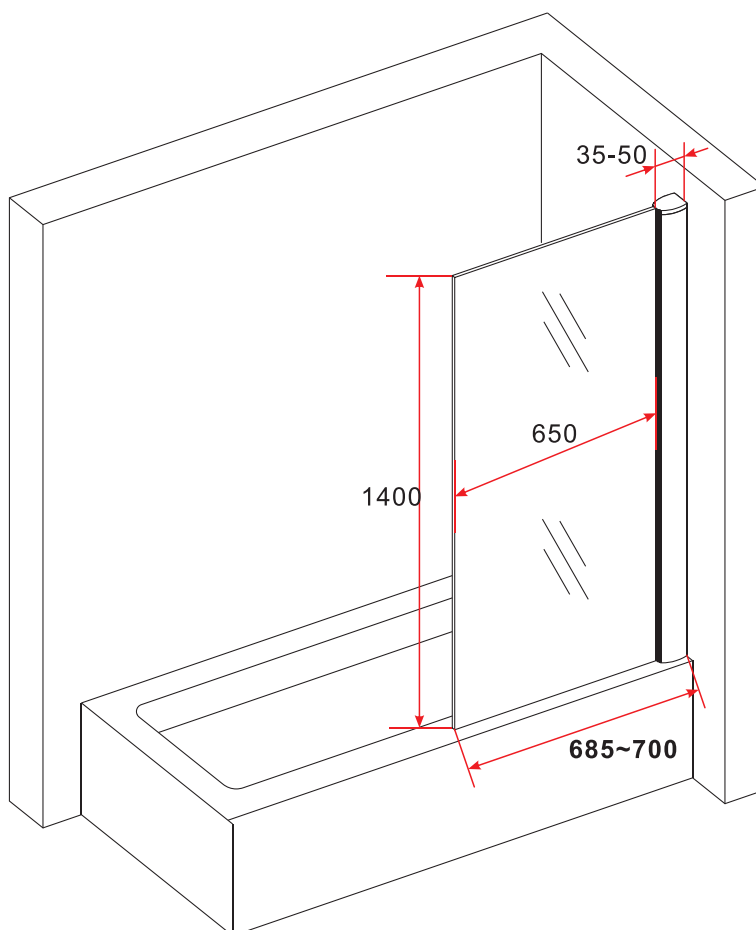


TECHNICAL DRAWING

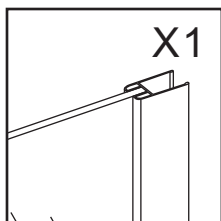


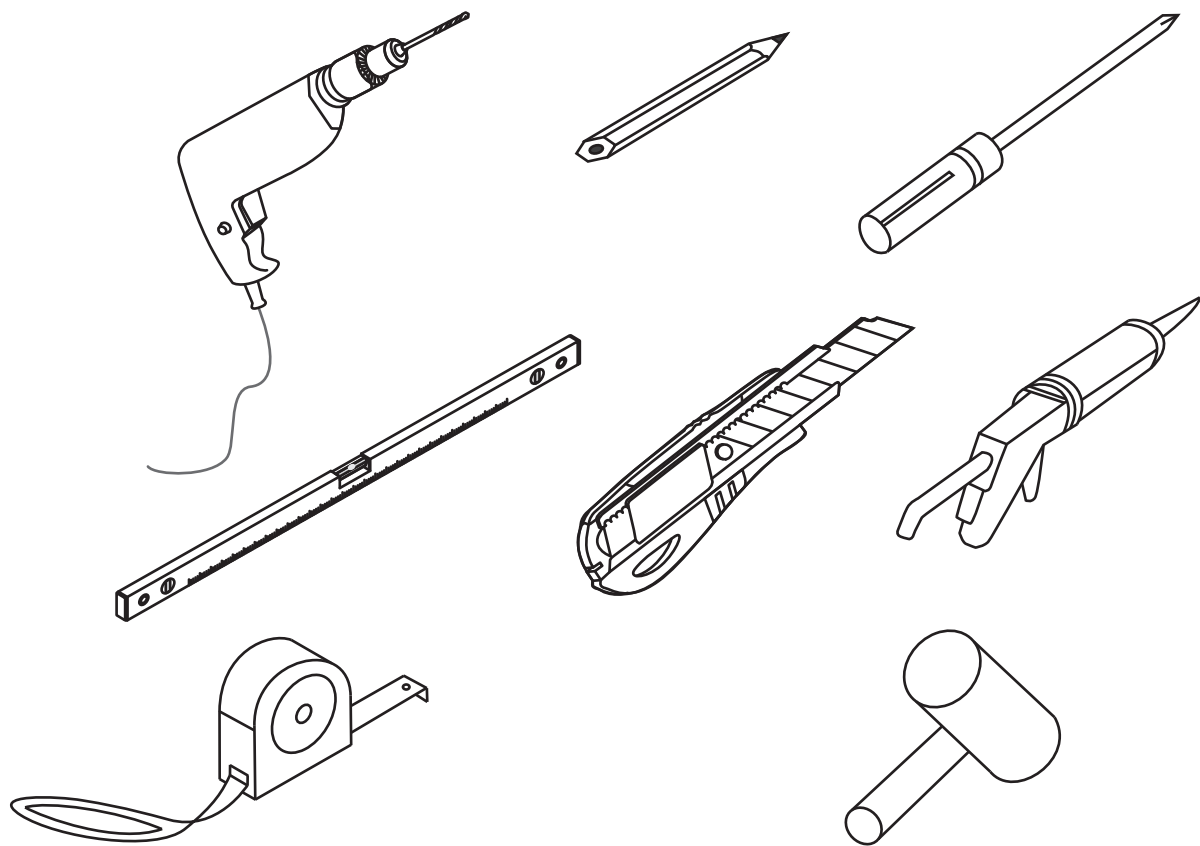


X1

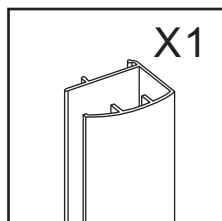


X1

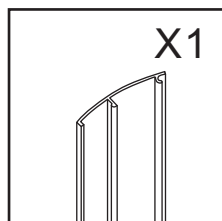


X1

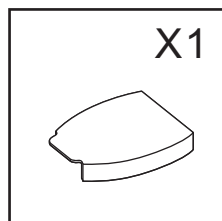


X1

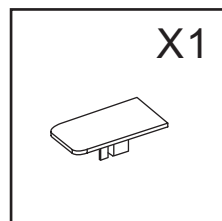

X1


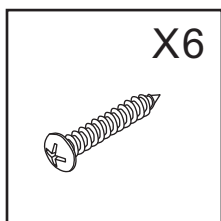


X6


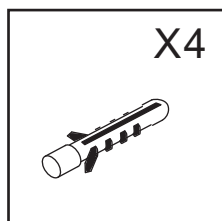


X4

Install the wall profile: according the line to install the profile
notice:put the profile in middle of line.

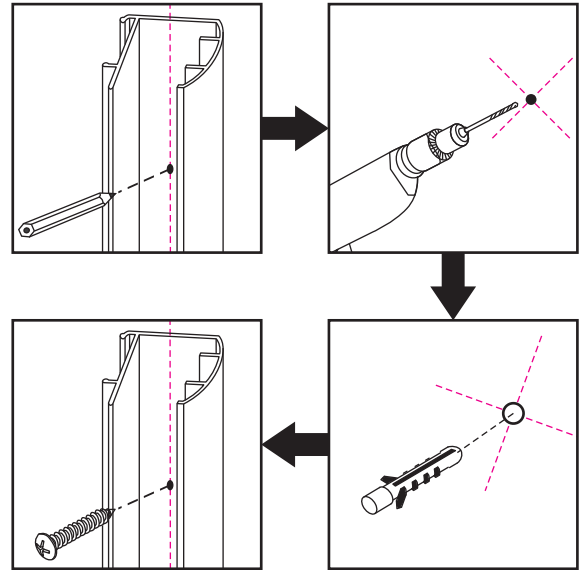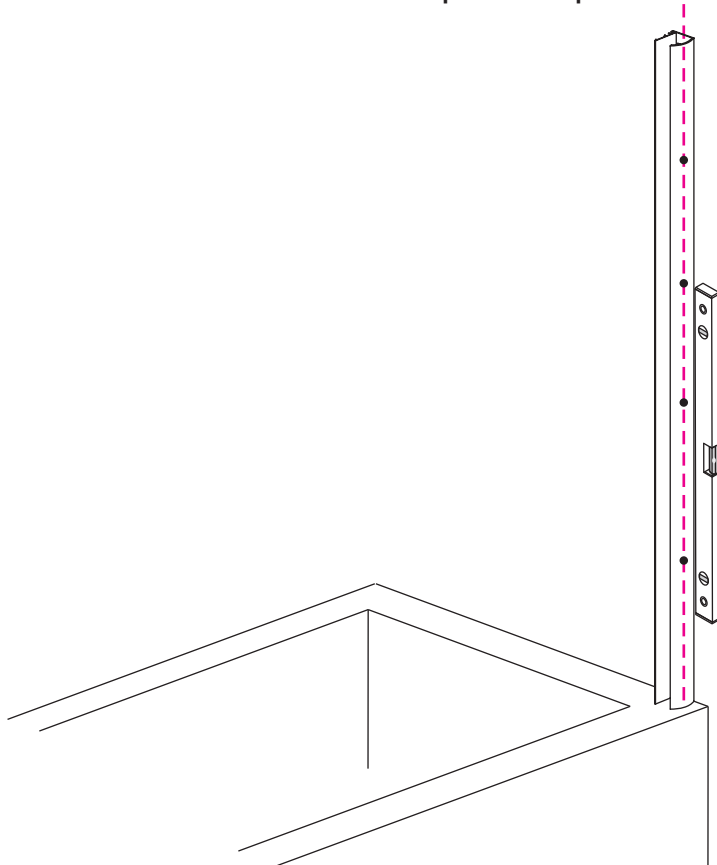


insert the glass into wall profile.

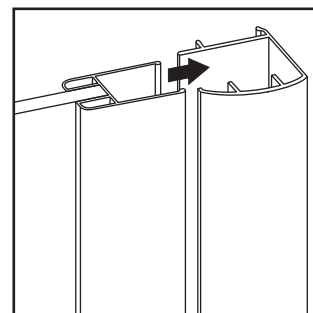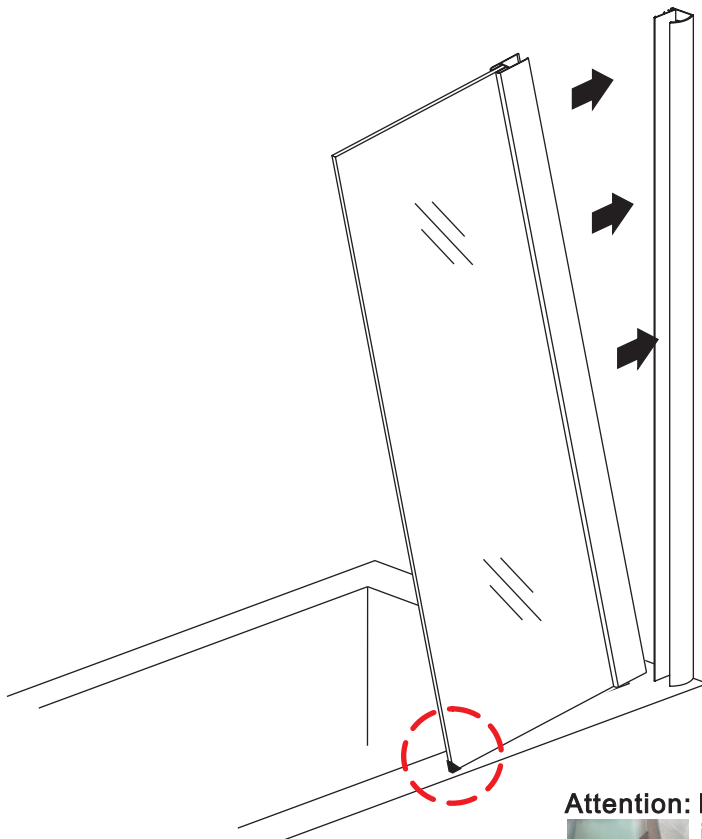

Attention: Do not remove the Black corner protector until insert well the glass into the wall profiles and fit well to prevent glass broken and splitted.



Install the decorate profile: install the connect buckle, insert the decorate profile into buckle as picture shows, then install the top decorate cap.

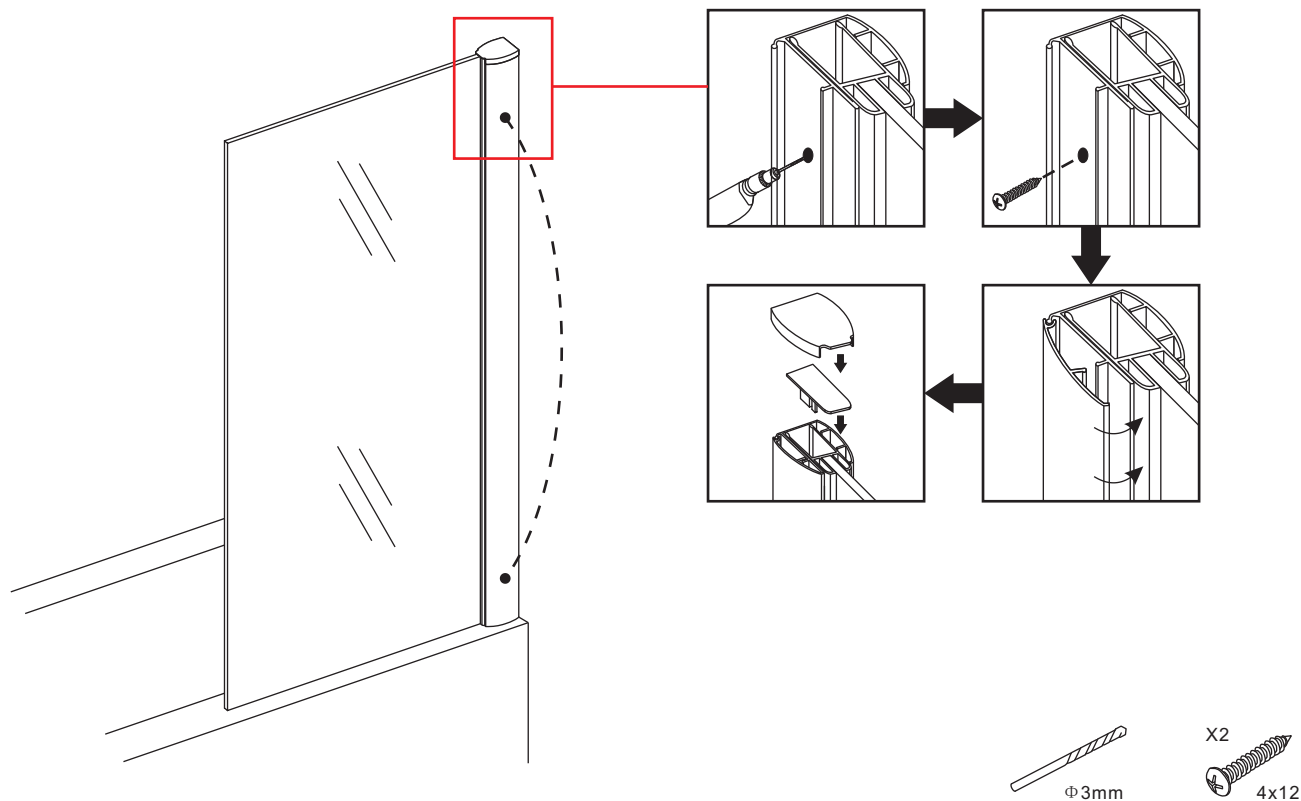

Take glue: please keep dry until 24 hour.

