















1300x1400mm





TECHNICAL DRAWING

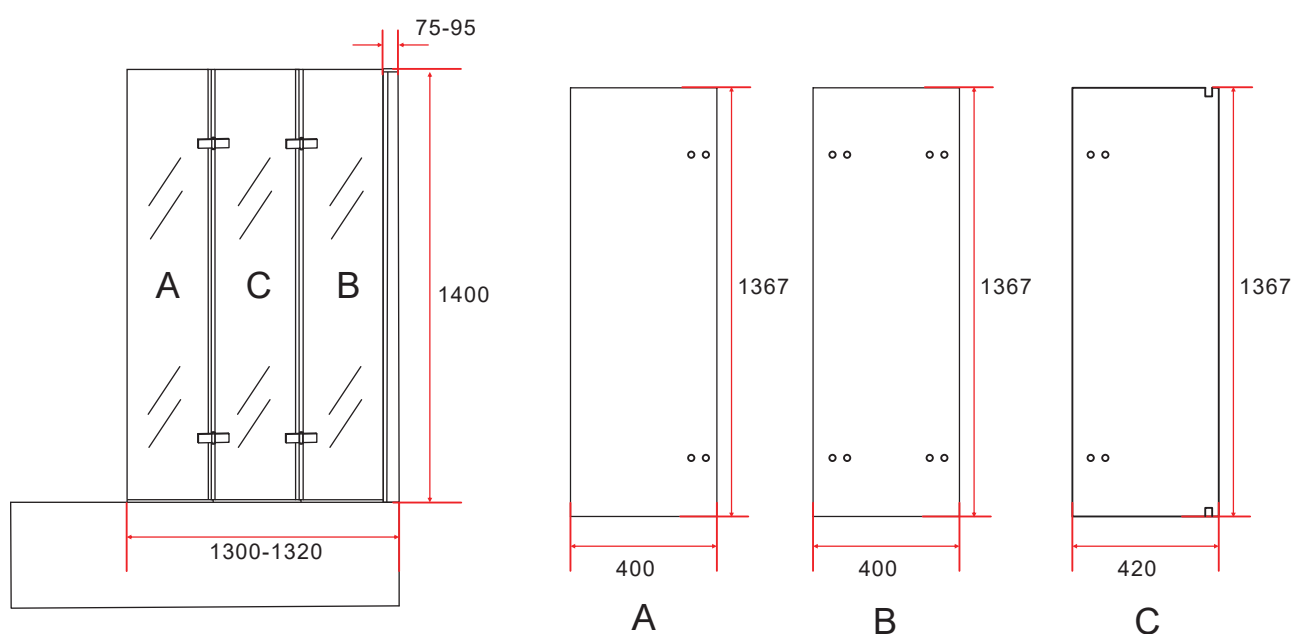

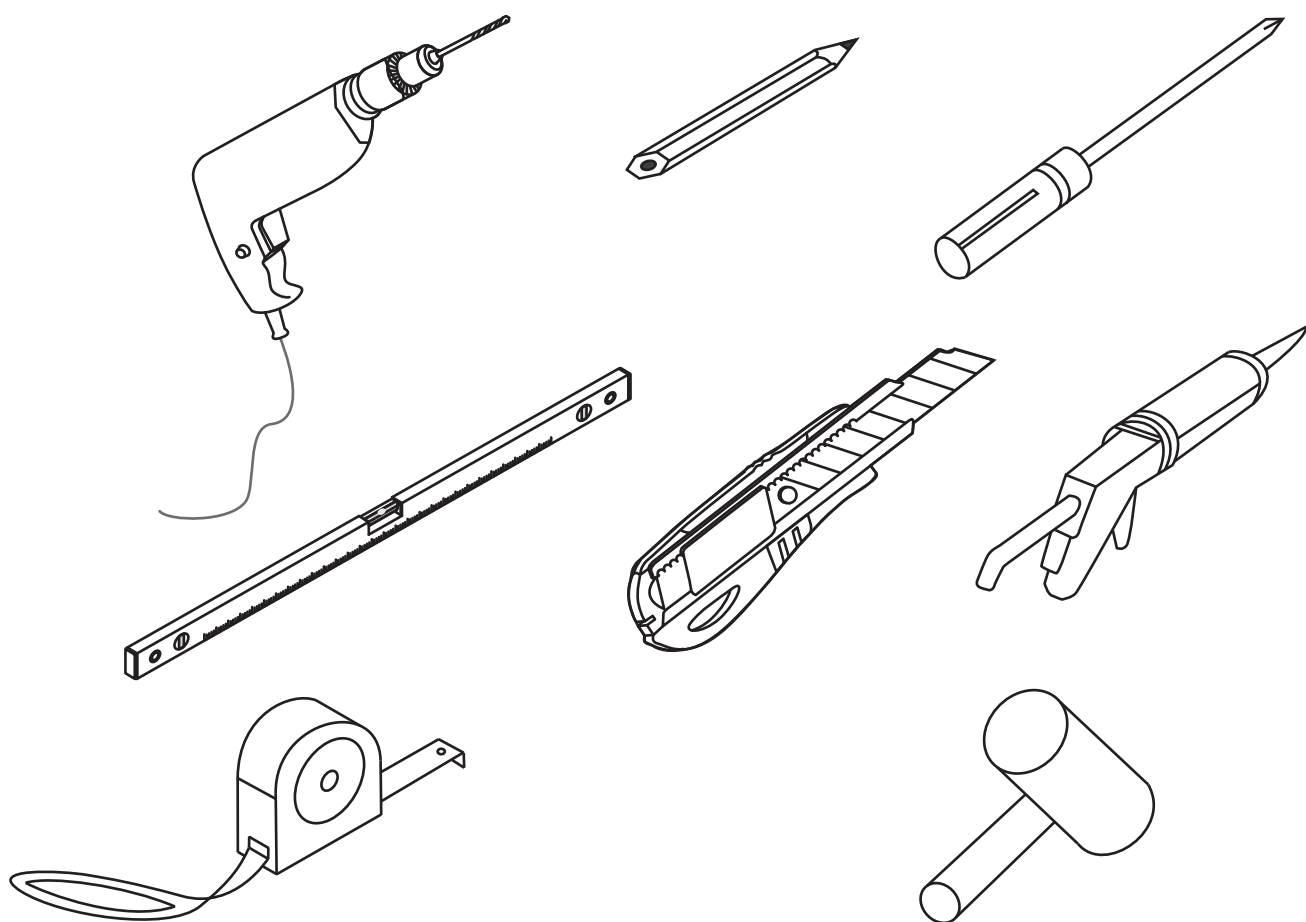

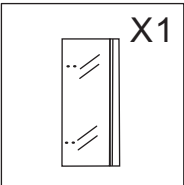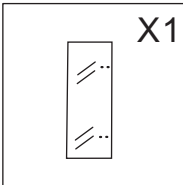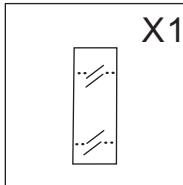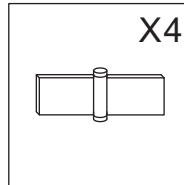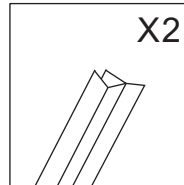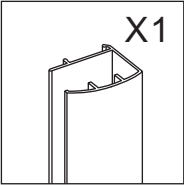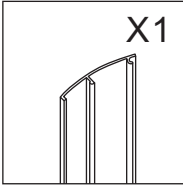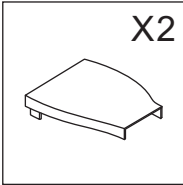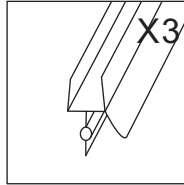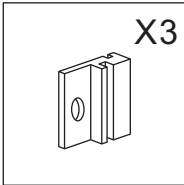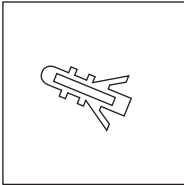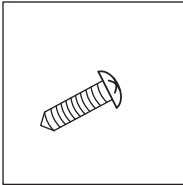
 X1	 X1	 X1	 X4	 X2
GLASS	GLASS	GLASS	HY-3109	6B-3-17
 X1	 X1	 X2	 X3	 X3
KQ-07	BB-04	PJ4514/PJ4515	6B-6-18	PJ-4729
				
PJ-4606				

Install the wall profile.

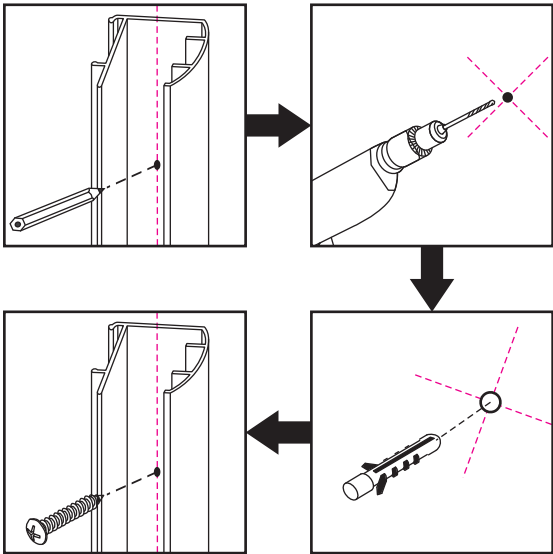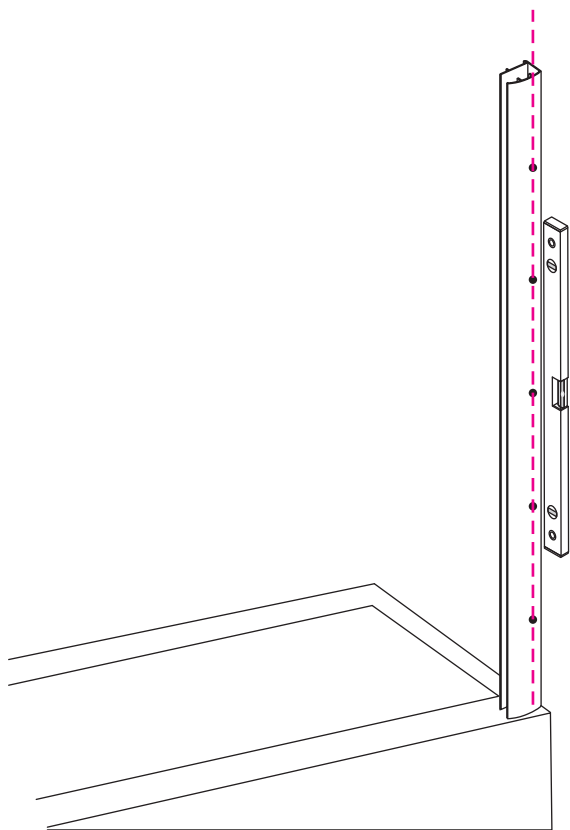


1

Install the hinge.

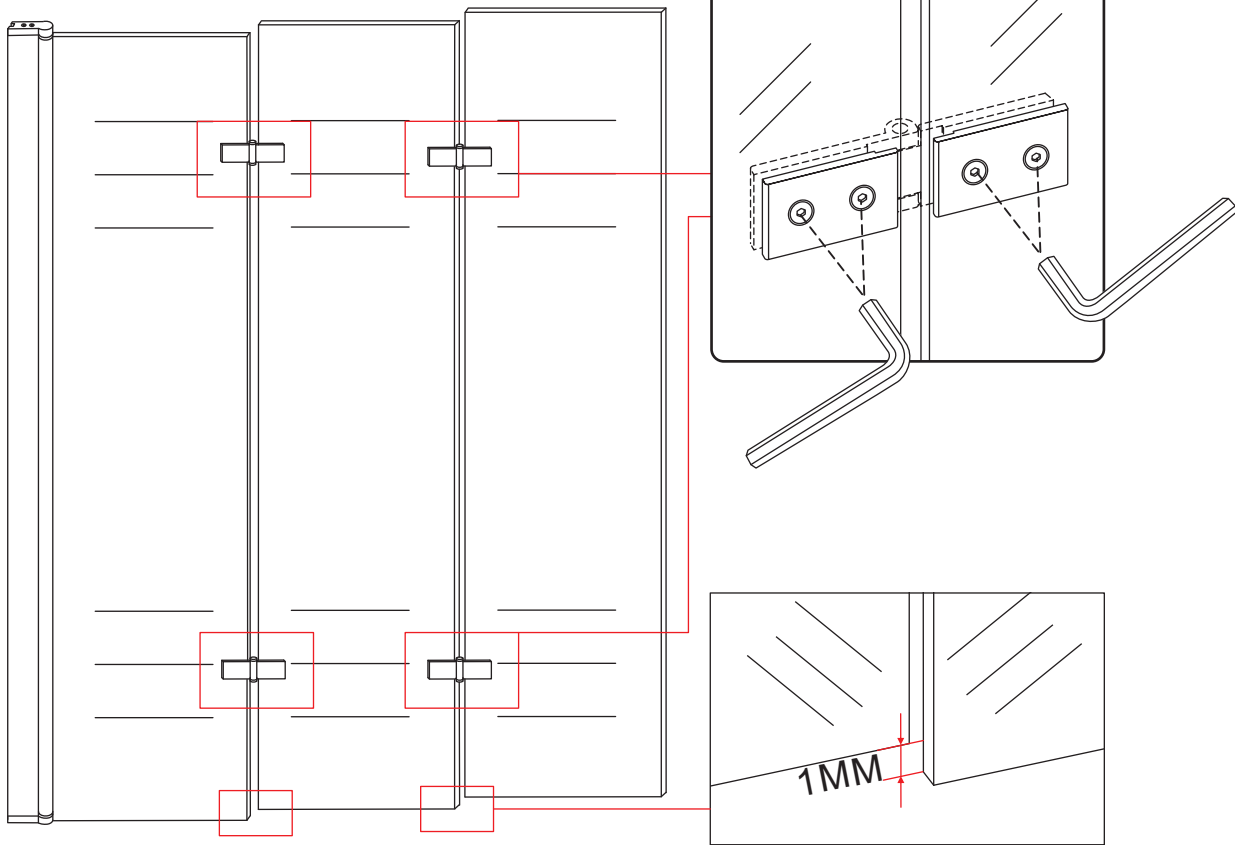


2

Install the water-proof between the glass.
Install the bottom water-proof gasket.

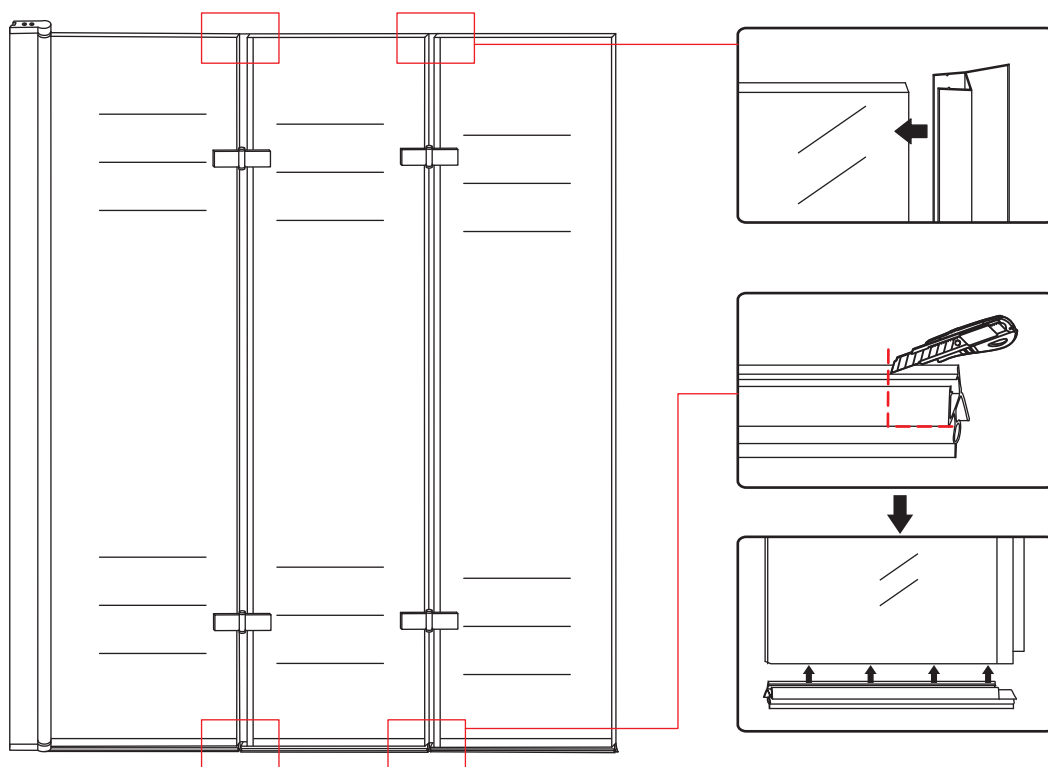


3

Install the fixed glass.







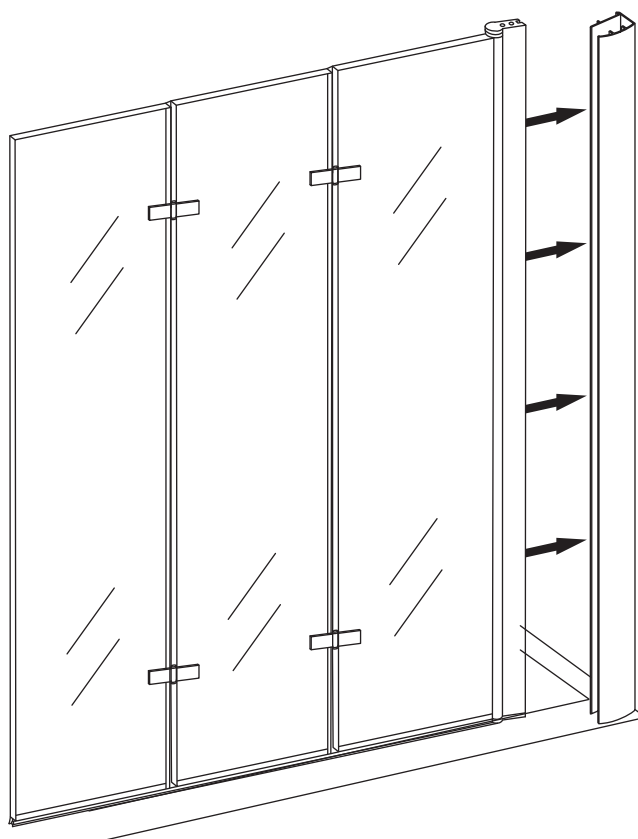


4




Install the wall profile broadside cover and top cover.

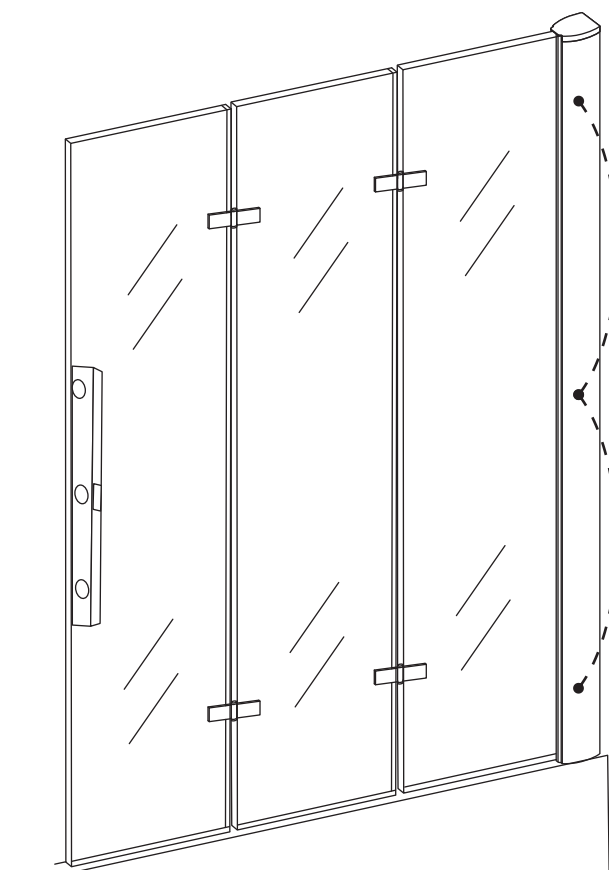


5

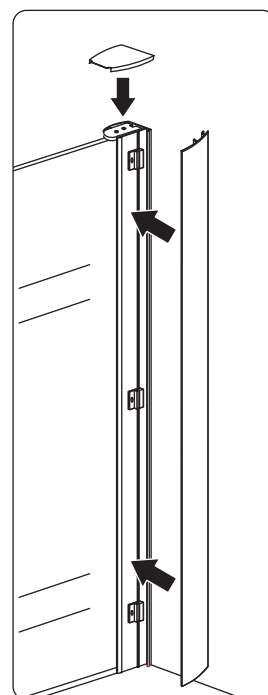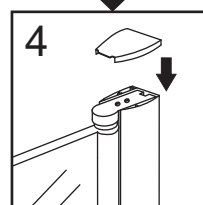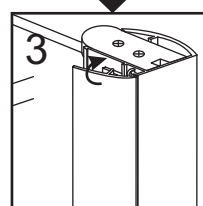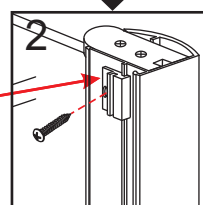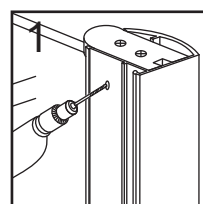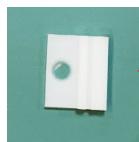

Install the hinge decorate part.
Take the glue.

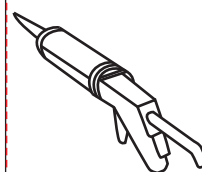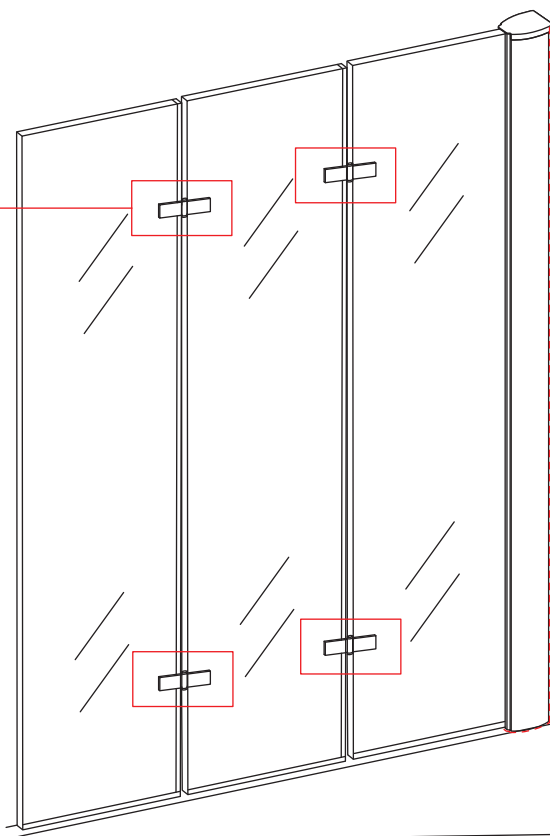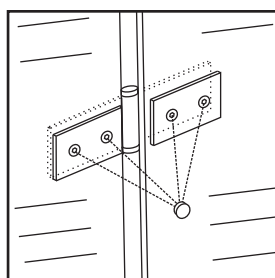

24 hour

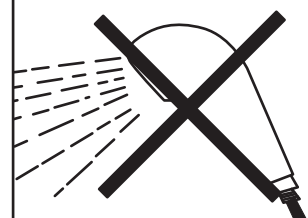

6